




# iRobot Roomba 551 Brush Case Replacement

Remove the brush case on your Roomba.

Written By: John McTigue

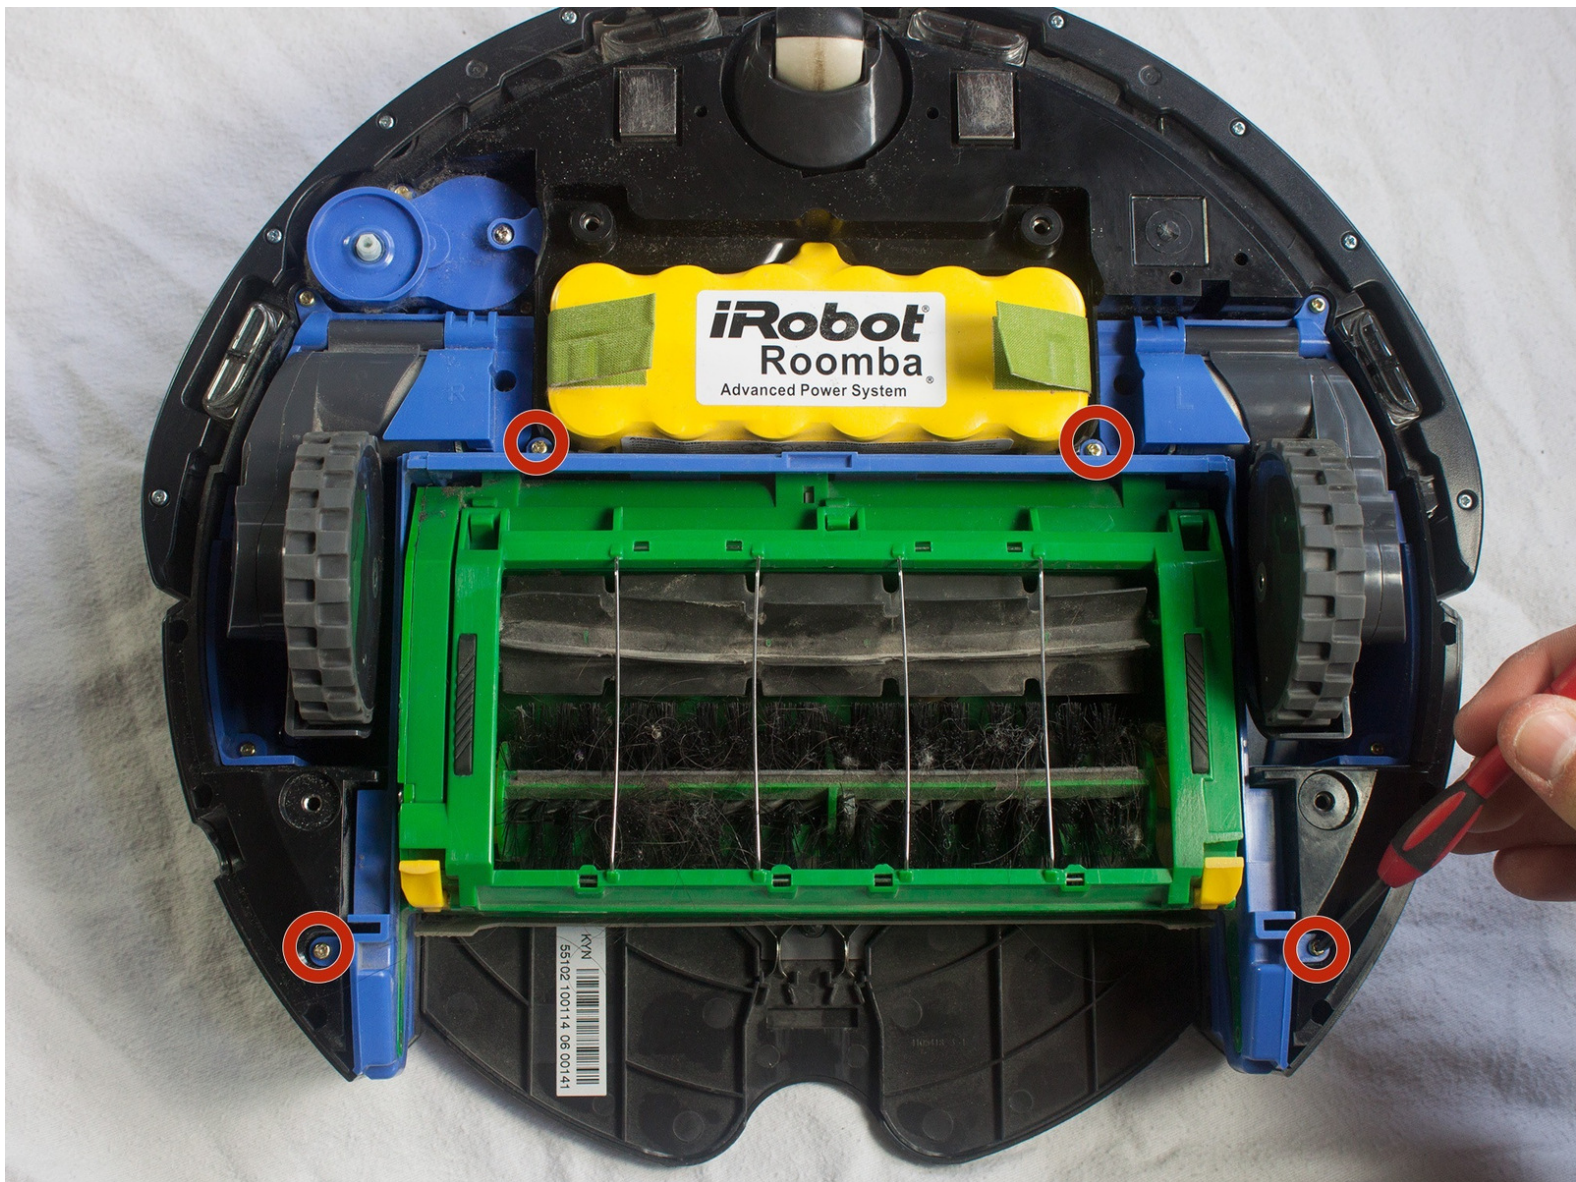

## INTRODUCTION

This guide explains how to remove the brush case from your Roomba.

---



### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
  - [Phillips #2 Screwdriver](#) (1)
-



## Step 1 — Side Brush




- Place your Roomba upside-down on a hard surface.

## Step 2




- While holding the side brush in place, use a Phillips #1 screwdriver to remove the 4.5mm screw from the center of the brush.

### Step 3

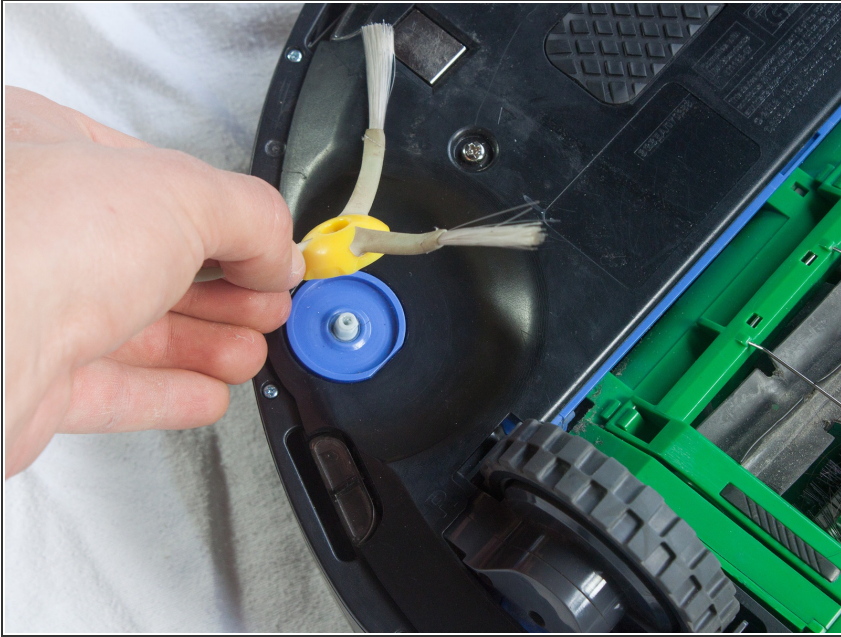

- Gently pull upwards on the brush to remove it.


### Step 4 — Bottom Plate

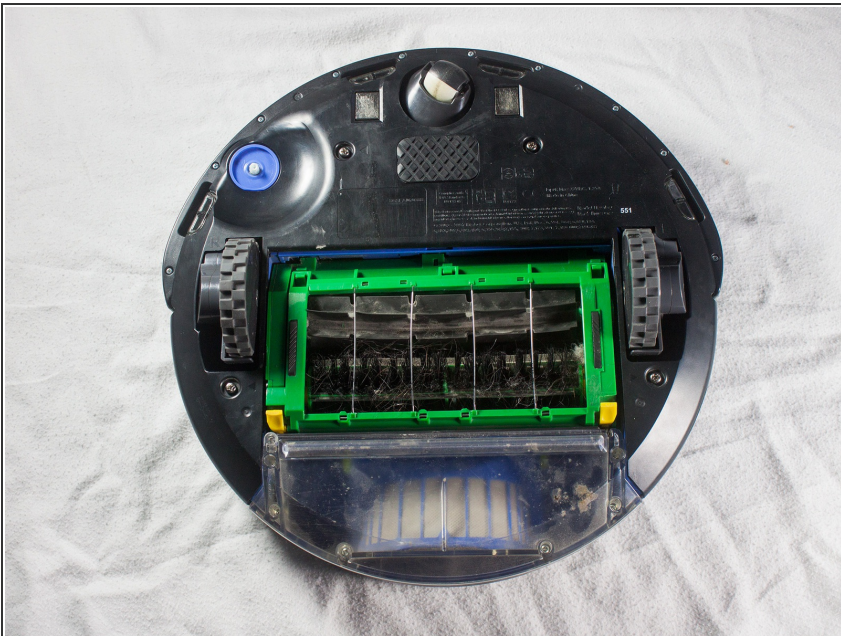

- Rotate the Roomba upside-down so the bottom is facing towards you.




## Step 5

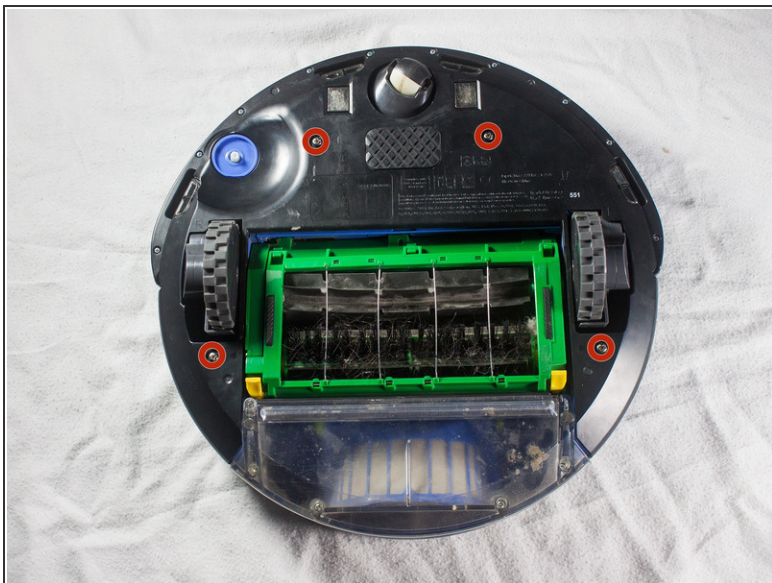

- Using a Phillips #2 screwdriver, remove the captive screws that hold the bottom plate in place.

## Step 6

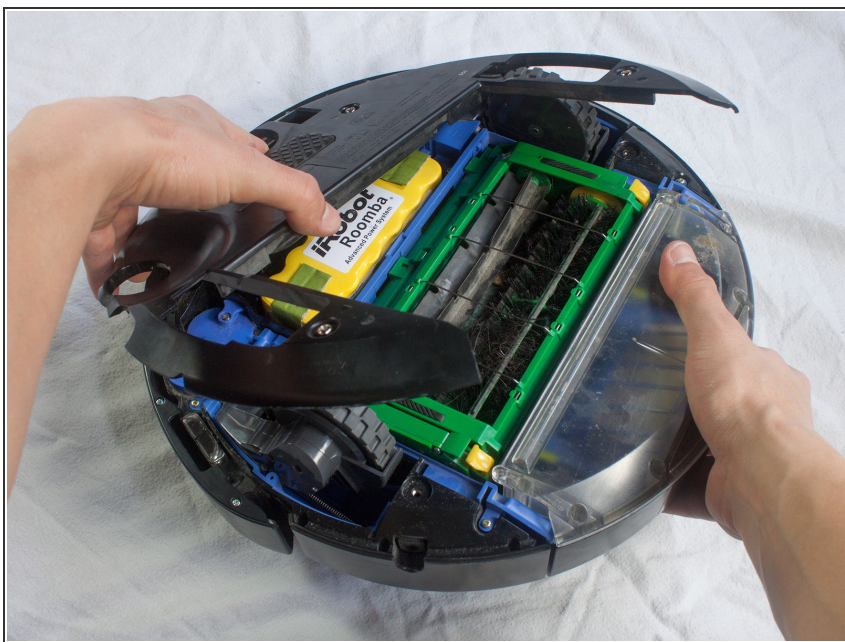

- Carefully lift the bottom plate.


⚠ The battery is only secured in place by the bottom plate, and may fall out once the bottom plate is removed.

## Step 7 — Dirt Bin



- Push on the dirt bin release button, and pull gently.

## Step 8 — Brush Case

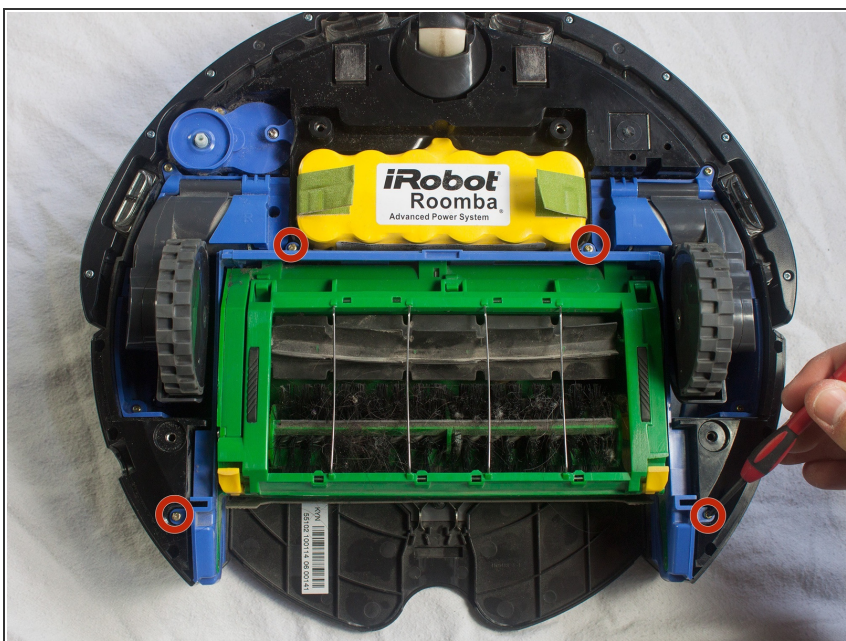

- Use a Phillips #1 screwdriver to loosen the 4 captive screws around the case .



## Step 9



- Grab the brush case and pull upwards to remove.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-22 12:35:44 AM.